


INSTALLATION INSTRUCTIONS


The Marley Universal Shower Trap offers the choice of a vertical or horizontal outlet.

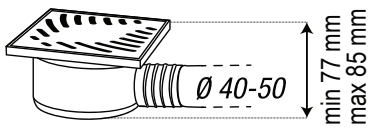

HORIZONTAL OUTLET

a) 40mm - Apply PVC Solvent Weld to the inside of the horizontal outlet of the shower trap and to the outside of the 40mm pipe. Insert the 40mm pipe into the shower trap outlet. Allow to dry.

b) 50mm - Apply PVC Solvent Weld to the outside of the horizontal outlet of the shower trap and to the inside of the 50mm Socket. Push the 50mm PVC Socket over the shower trap outlet. Allow to dry.

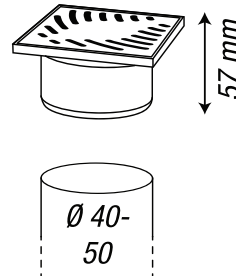


VERTICAL OUTLET

a) Remove the horizontal bottom outlet section of the shower trap.

b) Apply PVC Solvent Weld to the inside of the 40mm PVC Socket. Attach to the vertical outlet of the shower trap.

c) Apply PVC Solvent Weld to the outside of the 50mm pipe, attach to the vertical outlet of the shower trap.

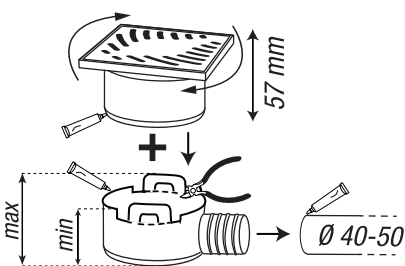

Remove winglets by hand or pliers to the required height, if space is not a problem, keep the winglets attached for maximum flow.

The design allows for an adjustment of 360°, to suit alignment with tiles and the direction of the outlet

